

## WEHS02 Application Instructions

## WEHS02 Series

Open the BLE Application and make sure you are on the Home page; then tap the 'Scan' button under the Phoenix Sensors Logo in the top right (Figure 1).

Open the drop-down menu titled 'Select Sensor' and find your MAC Address for your sensor to connect (figure 1).

aii VZW Wi-Fi 奈	9:54 AM	7 51% 💷
Scanning I	Finished	PHOENIX SENSORS
Select Sensor 🗘		🗘 Scan
Save	WEHS-9A:DC:1B:3E	: Del
42.6 %RH 25.8 °C		
Save	WEHS-C8:C8:BA:8	E: Del
40.4 %RH 27.8 °C		
Save	WEHS-28:F7:4A:0A	: Del
40.8 %RH 27.4 °C		
Save	WEHS-C1:82:F0:90	: Del
39.6 %RH 28.0 °C		
Save	WEHS-CO:F5:DA:EE	E Del
39.8 %RH 27.8 °C		
Sync		Save
Home	Chart	Setup




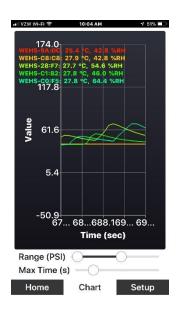


Figure 4

Once your sensors are connected, it should show a screen like that to the left. (Figure 2)

> Tap the 'Setup' tab at the bottom of the screen and set the mS (milliseconds) per sample. This is how fast the sensor will respond. (Figure 3)

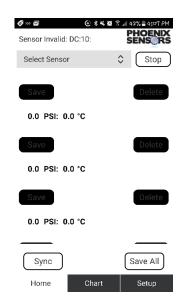

## Figure 1

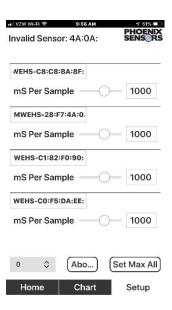


Figure 3

Tap the 'Chart' tab at the bottom of the screen, and you can find important information such as temperature (°C) and humidity "Value" (%RH) (Figure 4).